




Tecnologia para um mundo sempre em movimento.

Relay Starting ZM 621 6v - CAP ZM 621.96

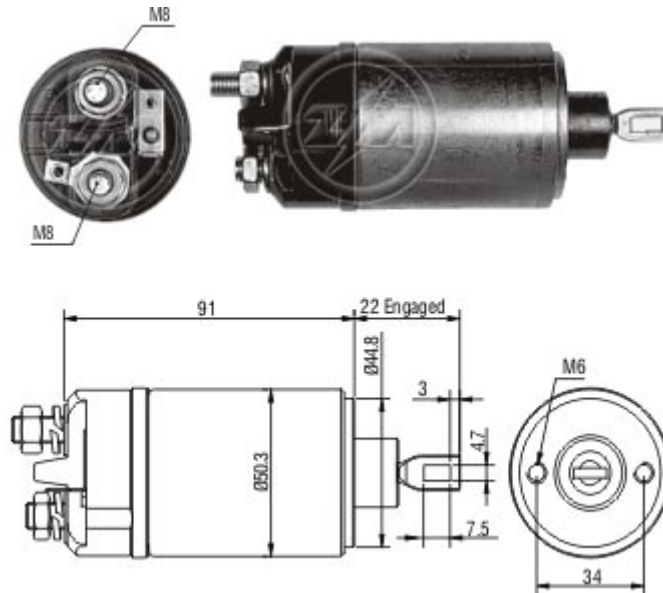

Used on:

Car Maker:	Vehicle:	Model variation:	From:	To:
VOLKSWAGEN	1200	A	1960	1975
	1200		1960	1975
	1300	A	1966	1967
	1300		1966	1967

Original Code:

BOSCH

- 0.331.302.001
- 0.331.302.002
- 0.331.302.004
- 0.331.302.005

Starter Code:

BOSCH

- 0.001.207.016
- 0.001.207.017
- 0.001.207.018
- 0.001.207.019
- 0.001.209.001
- 0.001.209.006
- 0.001.209.014
- 0.001.310.005
- 0.001.310.008
- 0.001.310.023

Rua Cerâmica Reis, 800 - Brusque - SC - Brasil - CEP 88355-370
Fone: 55 47 3251-2900 - Fax: 55 47 3251-2980 - www.zm.com.br
Insc. Est. 250.976.790 - CNPJ 76.812.379/0001-04

